Product sheet

Miniature connector



Product Contacts: 8 DIN, Male angled connector,

shieldable, cable outlet 6 - 8 mm, with UL

Pole 8 DIN


M16 IP67 Series 423 Article number 99 5671 79 08

Illustration




Scale drawing

Area

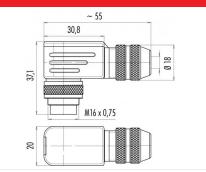


Contact Arrangement



	Χ	Υ
1	3,50	0,00
2	0,00	3,50
3	-3,50	0,00
4	2,47	2,47
5	-2,47	2,47
6	2,47	-2,47
7	-2,47	-2,47
8	0,00	-0,70

Attenuation characteristic

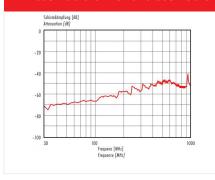

You can find the item description and assembly instruction on the next page.

Technical data

Common values

Connector Design Connector locking system Termination Wire gauge (mm) Wire gauge (AWG) Cable outlet Upper temperature Lower temperature

Male angled connector screw Solder 0.75 mm² 20 6 - 8 mm 95 °C -40 °C

Electrical values

Rated voltage 60 V Rated impulse voltage 500 V Pollution degree Overvoltage category Material group Ш Rated current (40°C) 5 A Volume resistivity $\leq 3~m\Omega$ EMV compliance shielded Degree of protection Mechanical operation > 500 mating cycles

Material

Material of contact Contact plating Material of contact body Material of housing

CuZn (Brass) Au (Gold) PBT (UL 94 V-0) CuZn (Brass nickel-plated)

Contacts: 8 DIN, Male angled connector, shieldable, cable outlet 6 - 8 mm, gold plated contacts, with UL approval



Product sheet

Pole


Miniature connector



Product Contacts: 8 DIN, Male angled connector,

shieldable, cable outlet 6 - 8 mm, with UL

approval 8 DIN Area Article number M16 IP67 Series 423 99 5671 79 08

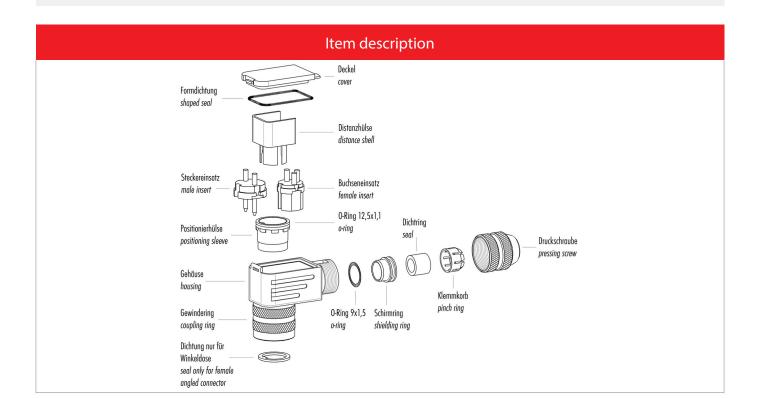

Installation instructions / Mounting cutout Winkelversion 1. Dichtungen montieren (3x). 2. Kabelteile auffädeln. 3. Kabel und Schirm abmanteln. 4. Litzen durch das Gehäuse fädeln. 5. Schirmring, Klemmkorb montieren. 6. Druckschraube leicht andrehen. 7. Litzen an Kontakteinsatz löten. 8. Verdrehhülse in Winkelstellung montieren. 9. Kontakteinsatz, Distanzhülse einsetzen. 10. Deckel einhaken. 11. Druckschraube festziehen (ca. 10-20 Nm). Angled version 1. Assemble sealing rings (3x). 2. Bead cable parts. 3. Dismantle cable and shielding braid. 4. Push single wires through housing. 5. Mount shielding ring and pinch ring. 6. Slightly fix pressing screw. 7. Solder wires to insert. 8. Mount positioning sleeve in angled position. 9. Put in insert and distance sleeve. 10. Mount lid. 11. Fix pressing screw (approx. 10-20 Nm).

